



# 01-UP Chrysler Town n' Country, Dodge Caravan and Chrysler Voyager Rear Hatch Pop Diagram:

If your Unit has a (+) Positive Trunk/Hatch Output use this diagram.

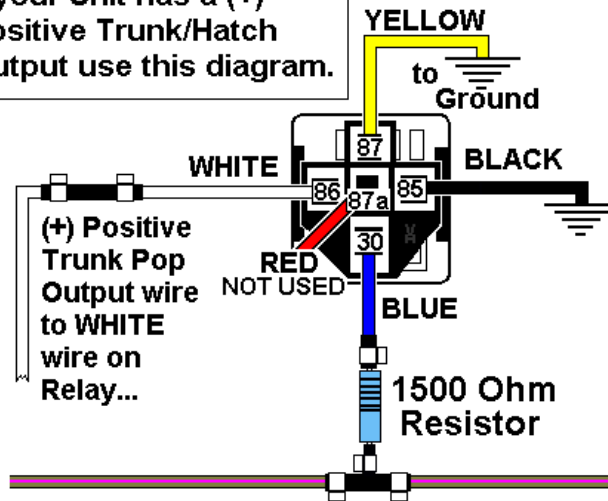

**PURPLE/TAN wire at BCM, Connector 2 Pin 6**

If your Unit has a (-) NEGATIVE Truck Pop Output you can use just the 1500 Ohm Resistor without the Relay...

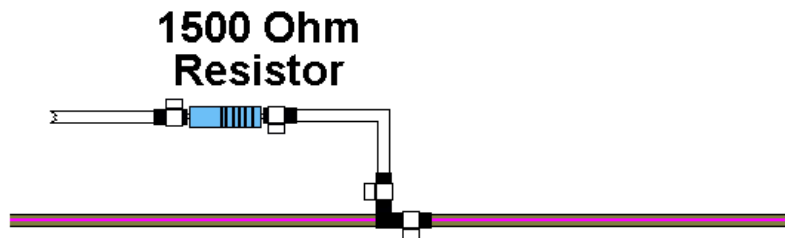

**PURPLE/TAN wire at BCM, Connector 2 Pin 6**