



**For JBS Units without On-board Door Lock Relays:**

Requires  
 (1) 778 or  
 (2) 775's  
 (1) 1500 OHM Resistor

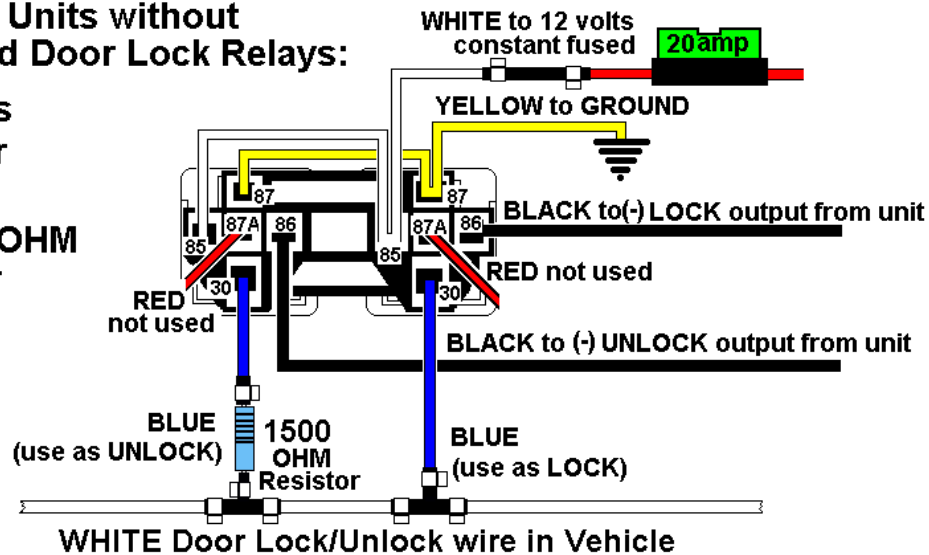


**For JBS Units with On-board Door Lock Relays:**  
 Requires (1) 1500 OHM Resistor

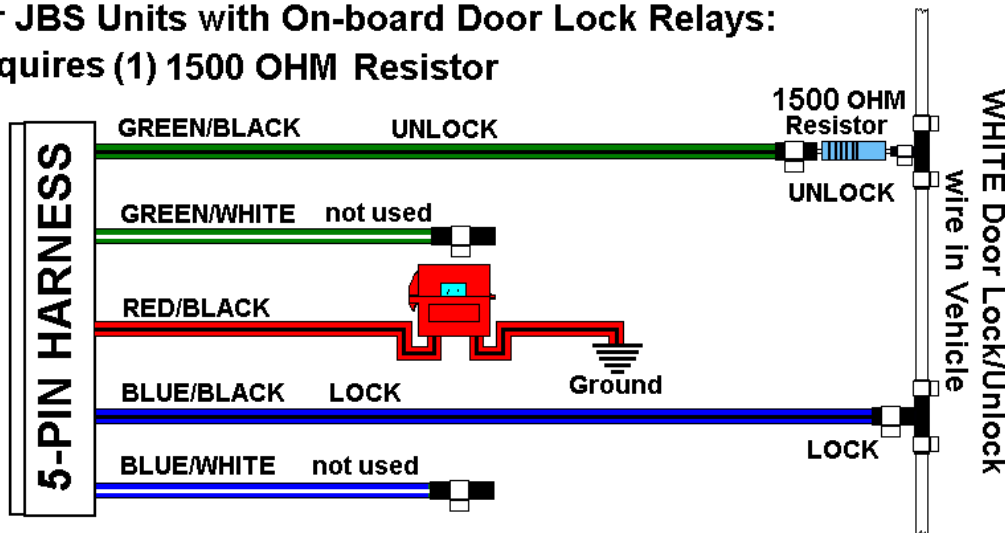

NOTE: Connect the RED WITH BLACK STRIPE wire to ground.

**For Units with On-board Door Lock Relays: Requires (1) 1500 OHM Resistor**

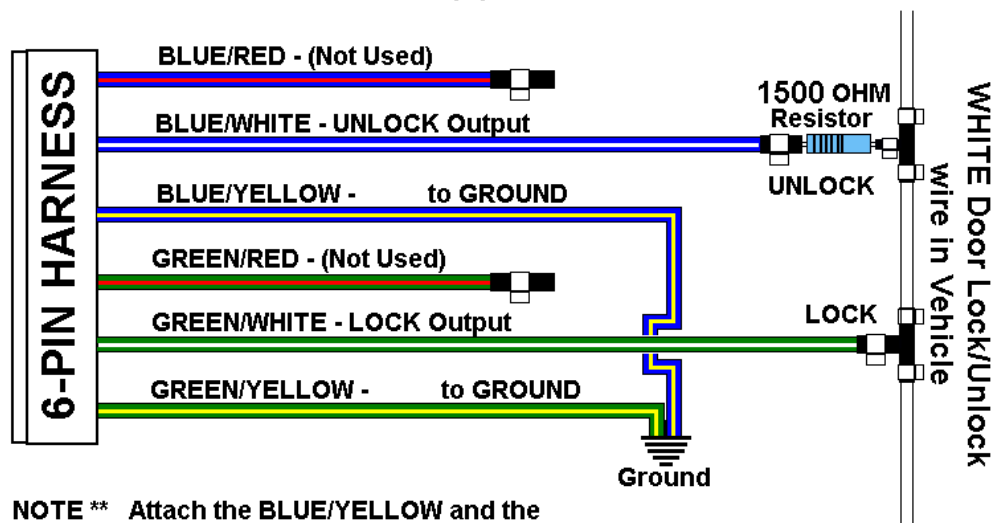

NOTE \*\* Attach the BLUE/YELLOW and the GREEN/YELLOW wires to a SOLID BODY GROUND.