


# ESCAPE DOMELIGHT SUPERVISION DIAGRAM:

Requires Part # 775

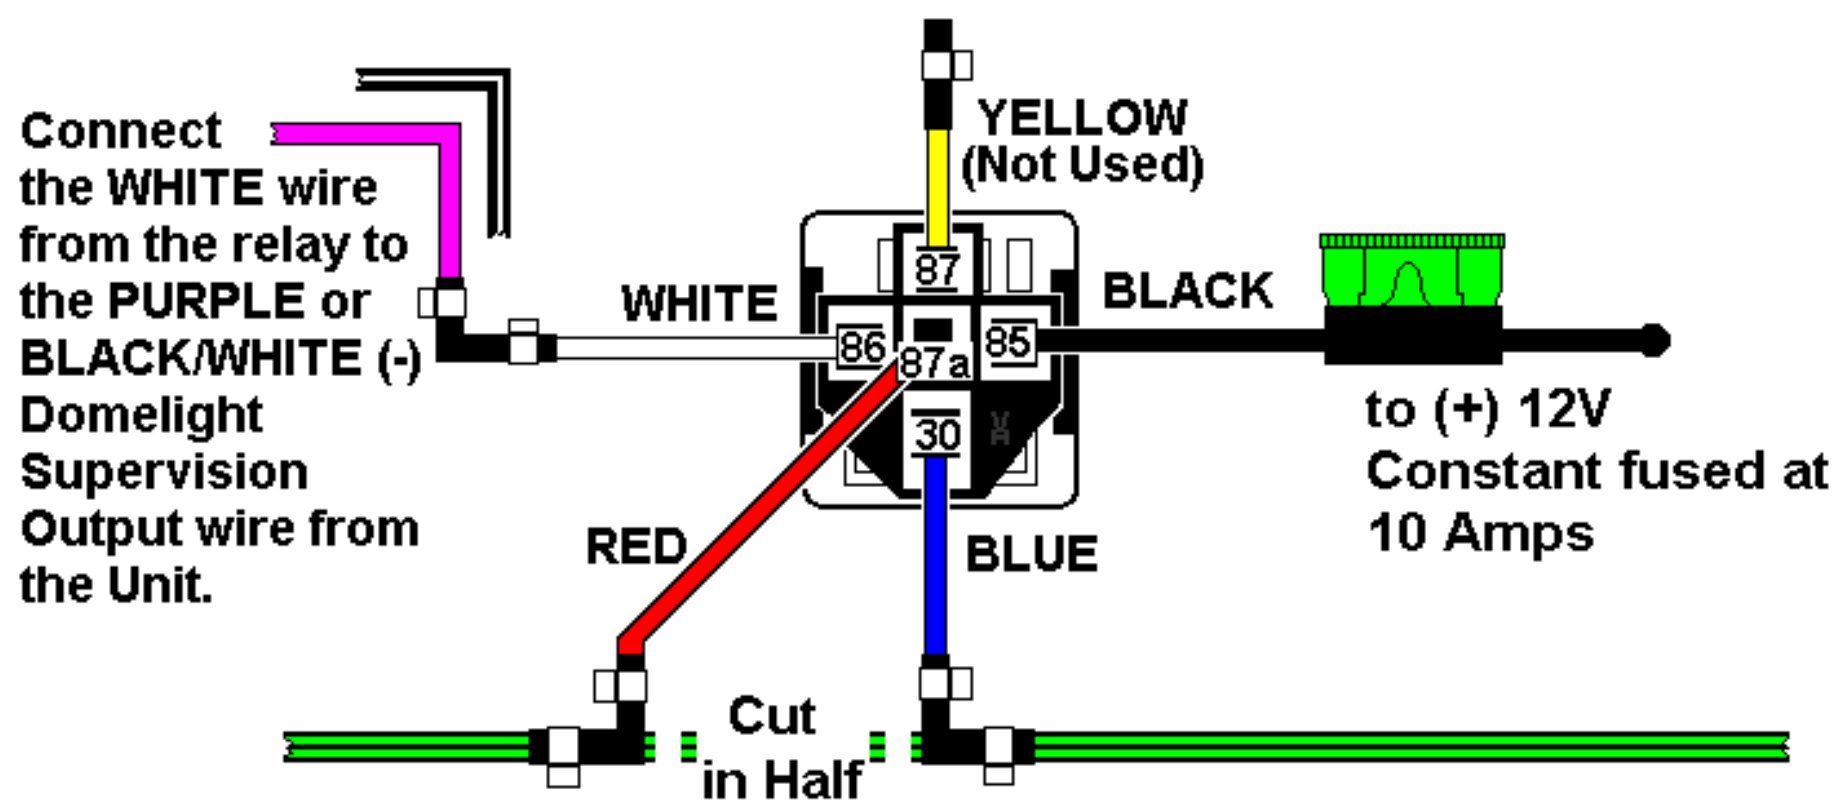

LIGHT GREEN/BLACK wire in Drivers Door Harness